









#### Robert Bosch Power Tools GmbH

70538 Stuttgart GERMANY

www.bosch-pt.com

**F 016 L81 775** (2018.02) 0 / 26



# **FONTUS**



**BOSCH** 

**en** Original operating instructions

2|

English page	3

€......

### **English**

#### **Safety Notes**

► WARNING! Read all safety warnings and all instructions. Failure to follow the safety warnings and instructions may result in electric shock, fire and/or serious injury.

#### **Explanation of symbols on the** machine



General hazard safety alert.



Read instruction manual.



Never direct the water jet against the face of people and

animals, the machine itself or electric components.

#### Operation

- ▶ The operator must use the machine in accordance with the regulations. The local conditions must be taken into account. When working, pay attention to other people, especially to children.
- ▶ Never allow children, persons with physical, sensory or mental limitations or a lack of experience and/or knowledge and/or people unfamiliar with these instructions to use the machine. Local regulations may restrict the age of the operator.

- ► Children should be supervised to ensure that they do not play with the machine.
- ▶ The operator is responsible for third parties in the work area. Do not accidentally direct the jet against other persons or animals in the area.

#### **Application**

- ▶ All current-conducting components in the work area must be protected against splashed water.
- ▶ Materials containing asbestos and other materials which contain substances which are hazardous to your health must not be sprayed.
- ▶ Operate the machine only when the battery compartment is shut. This protects the battery against splashed water.
- ▶ Before use, check that the machine and operating equipment are in perfect condition and are safe to operate. Do not use if it is not in perfect condition.
- ▶ The machine must be placed on a stable surface.
- ▶ Do not use solvent-containing liguids, undiluted acids, acetone or solvents, including petrol, paint thinners, heating oil. The sprayed vapours are highly flammable, explosive and toxic.
- ▶ Never fill the water tank with the filter removed or if the filter is damaged.

#### 4 | English

- ▶ Do not modify the machine. Unauthorized modifications can impair the safety of your machine, lead to increased noise and vibrations, and poor performance.
- ➤ Do not direct the spray jet against the faces of persons or animals.
- ➤ Never immerse the machine into water to fill the tank.
- ► High pressure may cause objects to rebound. If necessary wear suitable personnel protective equipment such as safety goggles.
- ► Use only fresh (not saline) water to fill the water tank.

## Recommendations for Optimal Handling of the Battery Pack

► Do not open the battery. There is a risk of short-circuiting.



Protect the battery against heat (e.g., against continuous intense sunlight), fire, water, and moisture. There is a risk of explosion

- ▶ In case of damage and improper use of the battery pack, vapours may be emitted. Ventilate the area and seek medical help in case of complaints. The vapours can irritate the respiratory system.
- ► Use the battery only in conjunction with your Bosch product. This is the only way in which you can protect the battery against dangerous overload.
- ➤ The battery can be damaged by pointed objects such as nails or screwdrivers or by force applied externally. An internal short circuit may occur, causing the battery to burn, smoke, explode or overheat.
- Do not short-circuit the battery. There is a risk of explosion.
- Occasionally clean the venting slots of the battery using a soft, clean and dry brush.

## Safety Warnings for Battery Chargers



**Read all safety warnings and all instructions.** Failure to follow the safety warnings and instructions may result in electric shock, fire and/or serious injury.

### Save all safety warnings and instructions for future reference.

Use the battery charger only when you fully understand and can perform all functions without limitation, or have received appropriate instructions.

- ▶ Never allow children, persons with physical, sensory or mental limitations or a lack of experience and/or knowledge and/or people unfamiliar with these instructions to use the battery charger. Local regulations may restrict the age of the operator.
- ➤ Supervise children at all times.
  This will ensure that children do not play with the charger.
- ▶ Charge only Bosch lithium-ion batteries with a capacity above **1,5** Ah (with at least **3** rechargeable battery cells). The battery voltage must match the battery charging voltage of the charger. Do not charge non-rechargeable batteries. Otherwise there is a danger of fire and explosion.

Keep the battery charger away from rain or moisture. Penetration of water in the battery charger increases the risk of an electric shock.

- ► Keep the charger clean. Dirt poses a risk of electric shock
- ➤ Always check the charger, cable and plug before use.

  Stop using the charger if you discover any damage. Do not open the charger yourself, and have it repaired only by a qualified specialist using only original replacement parts. Damaged chargers, cables and plugs increase the risk of electric shock.
- ➤ Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment. There is a risk of fire due to the charger heating up during operation.
- ➤ Do not cover the ventilation slots of the battery charger. Otherwise, the battery charger can overheat and no longer operate properly.
- For increased electrical safety, we recommend using a residual current device with a max. tripping current of 30 mA. Before using, always check your residual current device.

F 016 L81 775 | (22.02.2018)

Bosch Power Tools



#### **Transport and Storage**

➤ Switch the machine off and ensure that the extendable handle is locked before transporting.



Care should be taken when lifting and moving the machine, particularly when the

water tank is full. Check if the extendable handle is securely locked. Use the extendable handle and the lower front handle to lift the machine. Ensure a healthy back posture when lifting the machine. Keep your back straight and bend the knees.

- ► Use caution when moving the machine over slopes or steps. The machine is heavy when filled with water.
- ▶ Before storing, drain the water from the tank and the pump system.

#### Maintenance

- ➤ Switch the machine off and remove the battery before performing maintenance on the machine.
- ► Repairs may only be carried out by authorised Bosch Service Centres.

#### **Accessories and spare parts**

Accessories and spare parts which have been approved by Bosch must be used. Original accessories and spare parts guarantee that the machine can be operated safely and without any breakdowns.

#### **Symbols**

The following symbols are important for reading and understanding the operating instructions. Please take note of the symbols and their meaning. The correct interpretation of the symbols will help you to use the product in a better and safer manner.

Symbol	Meaning
1	Movement direction
$\bigcirc$	Reaction direction
	Switching on
0	Switching off
	Accessories/Spare Parts

#### **Intended Use**

The machine is intended for domestic use to clean vehicles, tools, windows, boots, bicycles, dogs (in low-pressure mode), outdoor toys, greenhouses, garden furniture, etc. The pressure mode and spray pattern should be correctly adjusted for the respective cleaning task.

## Product features (see figures A and D)

The numbering of the product features refers to the illustration of the machine on the graphics pages.

- (1) Nozzle head
- (2) Trigger
- (3) Hose connector for spray gun
- (4) Hose
- (5) Brush
- (6) Battery charge indicator
- (7) Storage compartment
- (8) Front handle
- (9) Water outlet
- (10) Filter (under filler cap)
- (11) Filler cap
- (12) Pressure selector
- (13) On/Off switch
- (14) Battery compartment cover
- (15) Battery compartment release button
- (16) Extendable handle lock
- (17) Extendable handle
- (18) Spray gun
- (19) Battery<sup>A)</sup>



#### 6 | English

(20) Battery unlocking button

(21) Charger<sup>A)</sup>

A) Accessories shown or described are not included with the product as standard. You can find the complete selection of accessories in our accessories range.

#### **Technical Data**

Cordless pressure cleaner		Fontus	
Article number		3 600 HB6 0	
Rated voltage	V	18	
Rated power	W	180	
Protection class		III, IP X4	
Max. pressure	MPa	1.5	
Rated pressure	MPa	1.2	
Max. water temperat- ure	°C	50	
Weight according to EPTA-Procedure 01:2014	kg	9.8	
Serial number	See seria on machi	l number (nameplate) ne	
Permitted ambient temp			
<ul> <li>during charging</li> </ul>	°C	0+45	
<ul> <li>during operation and storage</li> </ul>	°C	-20 +50	
Battery		Li-lon	
Article number/Capacity	/		
- 2607337187	Ah	1.5	
- 2607337211	Ah	2.0	
- 2607337199	Ah	2.5	
- 1 607 A35 07H	Ah	4.0	
- 1 607 A35 01Y	Ah	6.0	
Rated voltage	V	18	
Number of battery cells			
- 2607337187		5	
- 2607337211		5	
- 2607337199		5	
- 1 607 A35 07H		10	
- 1607 A35 01Y		10	
Charger	AL 1	.815 CV AL 1830 CV	

Charger		AL 1815 CV	AL 1830 CV
Article number			
2 607 226	EU	077	965
2 607 226	UK	079	967
Charging current A 1.5 3.0			
Charging period (battery discharged)			

Charger		AL 1815 CV	AL 1830 CV
- Battery with 1.5 Ah	min	63	33
- Battery with 2.0 Ah	min	84	45
- Battery with 2.5 Ah	min	105	60
- Battery with 4.0 Ah	min	160	95
- Battery with 6.0 Ah	min	230	130
Weight according to EPTA-Proced- ure 01:2014	kg	0.38	0.40
Protection class		□/II	□/II

### **Noise/Vibration Information**

Noise emission values determined according to **EN 60745-2-54**.

Typically the A-weighted noise levels of the product are: Sound pressure level **61** dB(A); sound power level **74** dB(A). Uncertainty K = **3** dB.

Overall vibrational values  $a_{\rm h}$  vector sum of three directions) and uncertainty K determined according

**EN 60745-2-54**:  $a_h$  < **2,5** m/s<sup>2</sup>, K = **1.5** m/s<sup>2</sup>.

### **Mounting and Operation**

Representation/Action Objective	Figure	Page
Product features	Α	12
Delivery scope	В	13
Filling the water tank	С	13
Battery charging and inserting	D	14
Carrying and transporting	E	14
Connecting the hose	F	15
Switching on	G	15
Adjusting the jet strength	Н	16
Spray-pattern variants	- 1	16
Using the brush	J	17
Switching off Disconnecting the hose	K	18
Removing the battery	L	18
Maintenance	М	19
Storage	N	19
Accessories	0	20

F 016 L81 775 | (22.02.2018) Bosch Power Tools

#### Switching on

#### **Charging the Battery**

Observe the correct mains voltage! The voltage of the power supply must correspond with the data given on the nameplate of the battery charger. Battery chargers marked with 230 V can also be operated with 220 V.

The battery is equipped with temperature monitoring that allows charging only in the temperature range between 0  $^{\circ}$ C and 45  $^{\circ}$ C. In this manner, a high battery service life is achieved

**Note:** The battery is supplied partially charged. To ensure full battery capacity, completely charge the battery in the battery charger before using for the first time.

The lithium-ion battery can be charged at any time without reducing its service life. Interrupting the charging procedure does not damage the battery.

The Electronic Cell Protection (ECP) protects the lithium-ion battery against deep discharging. When the battery is empty, the machine is switched off by means of a protective circuit: The pump stops.

Do not continue to press the On/Off switch after an automatic shut-off of the machine. The battery could become damaged.

Observe the notes for disposal of the battery.

## Inserting/Removing the Battery (see figures D and L)

**Note:** Using unsuitable batteries can lead to malfunctions or damage the machine.

Press the battery compartment release button (15) to open the battery compartment cover (14). Insert the charged battery (19). Ensure the battery is inserted correctly.

Close the battery compartment cover and ensure that the lock of the battery compartment release button **(15)** has engaged. The battery compartment cover **(14)** protects the battery against splashed water during operation.

Press the battery compartment release button (15) to open the battery compartment cover (14). To remove the battery (19) from the machine, press the battery unlocking button (20) and pull the battery out.

#### **Charging Procedure**

The charging procedure starts as soon as the mains plug of the charger is plugged into a socket outlet and the battery **(19)** is inserted onto the charger **(21)**.

Due to the intelligent charging method, the charging condition of the battery is automatically detected and the battery is charged with the optimum charging current, depending on battery temperature and voltage.

This gives longer life to the battery and always leaves it fully charged when kept in the charger for storage.

## Meaning of the Indication Elements (AL 1815 CV)

#### Flashing battery charge indicator

**♦** Charge

The charging procedure is signalled by flashing of the battery charge indicator.

#### Continuous lighting of the battery charge indicator

<u>∏</u>≡**E** <u>Full</u>

**Continuous lighting** of the battery charge indicator indicates that the battery is fully

charged or that the temperature of the battery is not within the allowable charging temperature range, and cannot be charged for this reason. The battery is charged as soon as the allowable charging temperature range is reached.

When the battery is not inserted, **continuous lighting** of the battery charge indicator indicates that the mains plug is inserted in the socket outlet and that the battery charger is ready for operation.

## Meaning of the Indication Elements (AL 1830 CV)

#### (Fast) Flashing of the Green Battery Charge Indicator

Charge dicator.

The rapid-charging procedure is indicated by **fast flashing** of the **green** battery charge in-

**Note:** The rapid-charging procedure is only possible when the battery temperature is within the allowable charging temperature range, see section "Technical Data".

#### (Slow) Flashing of the Green Battery Charge Indicator



When the charging condition of the battery is 80%, the **green** battery charge indicator

#### flashes slowly.

The battery can be removed for immediate use.

### Continuous Lighting of the Green Battery Charge Indicator

<u> Full</u>

**Continuous lighting** of the battery charge indicator indicates that the battery is fully

When the battery is not inserted, **continuous lighting** of the battery charge indicator indicates that the mains plug is inserted in the socket outlet and that the battery charger is ready for operation.

#### Continuous Lighting of the Red Battery Charge Indicator

Continuous lighting of the red battery charge indicator indicates that the temperature of the battery is not within the allowable charging temperature range, see section "Technical Data". As soon as the allowable

battery is not within the allowable charging temperature range, see section "Technical Data". As soon as the allowable charging temperature range is reached, the battery charger automatically switches to rapid charging.

#### Flashing Red Battery Charge Indicator

A flashing red battery charge indicator indicates a different malfunction of the charging procedure, see section "Troubleshooting – Causes and Corrective Measures".



#### 8 | English

#### **Operation**

#### **Starting**

Always use fresh water to fill the water tank. Check if the filter **(10)** is inserted and undamaged (see figure **C**).

Connect the hose (4) to the water outlet (9) and the spray gun (18) (see figure F).

Select the desired spray pattern by rotating the nozzle head (1) (see figure I).

Select the desired jet strength with the pressure selector (12) (see figure H).

Press the On/Off switch **(13)** and pull and hold the trigger **(2)** until water comes out (see figure **G**).

 $oldsymbol{Note}$ : It can take up to 10 seconds for water to come out when the product is first used after the water tank has been emptied.

#### **Autostop Function**

The machine is designed to switch off the motor as soon as the spray-gun trigger (2) is released.

#### **Dry-running Protection**

The motor shuts off when the pump runs without water for more than **20** seconds.

Switch off the machine and refill the water tank. Then, switch the machine on again.

#### **Sleep Function**

The machine automatically switches off after  ${\bf 5}$  minutes without operation.

#### Mounting/dismounting the brush (see figure J)

The brush **(5)** mounts onto the spray gun and makes cleaning more effective.

Slide the brush straight onto the spray gun **(18)**. Guide the upper and bottom clip of the brush into the corresponding openings on the spray gun.

Remove the brush by pressing the bottom clip upward and pulling the brush off the spray gun.

#### **Troubleshooting**

#### Cordless pressure cleaner

Problem	Possible Cause	Corrective Action
Motor refuses to start	Battery discharged	Recharge battery
	Battery too hot/cold	Allow to cool/warm
	Machine frozen	Wait until machine has defrosted
Pressure pulsating	Blocked nozzle	Clean nozzle
	Air in pump	Operate machine in turbo-pressure mode with nozzle set to shower jet until system is air-free
Motor running but no	Water tank empty	Refill water tank
or limited working pressure	Pump not vented	Press and hold trigger to vent air
Power indication lights up but pump no longer running	Dry-running protection has been activated	Switch machine off, refill water tank and switch machine on again
Machine switches off	Sleep function has been activated	Press On/Off switch for activation
	Battery discharged	Recharge battery
Water leaks from machine	Leaking pump	Slight water leaks are possible; in case of excessive leaks, contact Bosch Service Centre
	Leaking connections	Check if connections are properly mounted
	Filler cap untight	Check if filler cap is properly closed
Motor starts in standby mode	Pump, spray gun or hose leaking	If happening continuously contact Bosch Service Centre
Hose cannot be removed	When machine is still switched on, pressure in system increases the required force to remove connectors	Switch machine off, then pull trigger to release the pressure

F 016 L81 775 | (22.02.2018) Bosch Power Tools

#### **Battery and charger**

Problem	Possible Cause	Corrective Action
Flashing red battery	Battery not (properly) inserted	Properly insert battery in charger
charge indicator  No charging procedure possible	Battery contacts contaminated	Clean the battery contacts (e. g. by inserting and removing the battery several times) or replace the battery
	Battery defective	Replace the battery
Battery charge indicat- ors do not light up	Mains plug of battery charger not plugged in (properly)	Insert mains plug (fully) into the socket outlet
	Socket outlet, mains cable or battery charger defective	Check the mains voltage; have the battery charger checked by an authorised after-sales service agent for Bosch power tools

## Maintenance, Storage and Transportation

Switch the machine off and press the trigger to drain the water from the hose.

Disconnect hose from spray gun and water outlet. The spray gun, brush and hose can be stored with the machine.

Drain water from the system and remove the battery.

## After-sales service and advice on using products

#### www.bosch-pt.de

In all correspondence and spare parts orders, please always include the 10-digit article number given on the nameplate of the product.

#### Australia, New Zealand and Pacific Islands

Robert Bosch Australia Pty. Ltd.

Power Tools Locked Bag 66

Clayton South VIC 3169 Customer Contact Center

Inside Australia:

Phone: (01300) 307044 Fax: (01300) 307045 Inside New Zealand:

Phone: (0800) 543353 Fax: (0800) 428570 Outside AU and NZ: Phone: +61 3 95415555 www.bosch-pt.com.au www.bosch-pt.co.nz

#### **Great Britain**

Robert Bosch Ltd. (B.S.C.)

P.O. Box 98 Broadwater Park North Orbital Road Denham Uxbridge UB 9 5HJ

At www.bosch-pt.co.uk you can order spare parts or arrange the collection of a product in need of servicing or re-

pair.

Tel. Service: (0344) 7360109 E-Mail: boschservicecentre@bosch.com

#### Ireland

Origo Ltd.

Unit 23 Magna Drive

Magna Business Park

City West Dublin 24

Tel. Service: (01) 4666700 Fax: (01) 4666888

#### Republic of South Africa

#### **Customer service**

Hotline: (011) 6519600

#### **Gauteng - BSC Service Centre**

35 Roper Street, New Centre

Johannesburg

Tel.: (011) 4939375 Fax: (011) 4930126 E-Mail: bsctools@icon.co.za

#### **KZN - BSC Service Centre**

Unit E, Almar Centre 143 Crompton Street

Pinetown

Tel.: (031) 7012120 Fax: (031) 7012446 E-Mail: bsc.dur@za.bosch.com

#### Western Cape - BSC Service Centre

Democracy Way, Prosperity Park

Milnerton

Tel.: (021) 5512577 Fax: (021) 5513223 E-Mail: bsc@zsd.co.za

#### **Bosch Headquarters**

Midrand, Gauteng Tel.: (011) 6519600 Fax: (011) 6519880

E-Mail: rbsa-hq.pts@za.bosch.com



#### 10 | English

#### **Transport**

The contained lithium-ion batteries are subject to the Dangerous Goods Legislation requirements. The batteries are suitable for road-transport by the user without further restrictions.

When being transported by third parties (e.g.: air transport or forwarding agency), special requirements on packaging and labelling must be observed. For preparation of the item being shipped, consulting an expert for hazardous material is required.

Dispatch battery packs only when the housing is undamaged. Tape or mask off open contacts and pack up the battery in such a manner that it cannot move around in the packaging. Please also observe the possibility of more detailed national regulations.

#### **Disposal**



The machine, rechargeable batteries, accessories and packaging should be sorted for environmental-friendly recycling.



Do not dispose of power tools and batteries/ rechargeable batteries into household waste!

#### **Only for EC countries:**

According to the European Guideline 2012/19/EU, power tools that are no longer usable, and according to the European Guideline 2006/66/EC, defective or used battery packs/batteries, must be collected separately and disposed of in an environmentally correct manner.

#### **Battery packs/batteries:**


#### Li-lon:

Please observe the instructions under Transport.









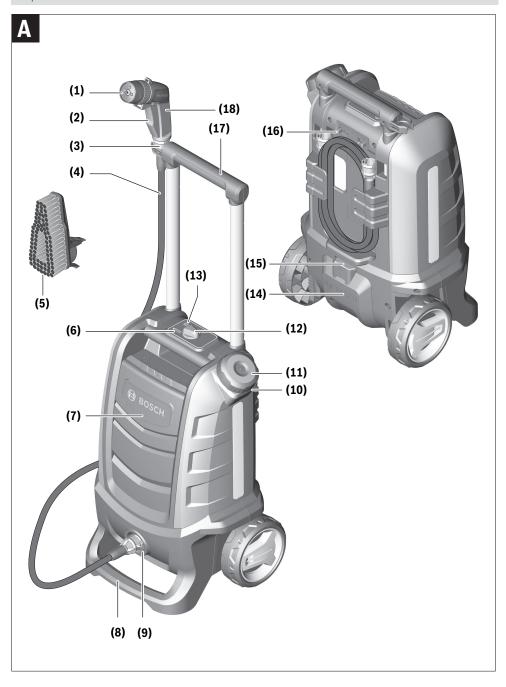



F016L81775 | (22.02.2018) Bosch Power Tools



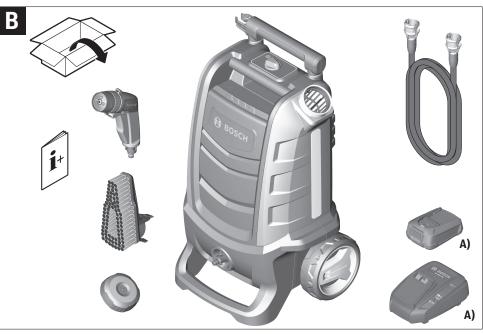

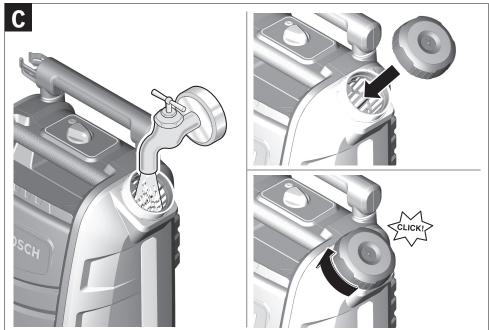


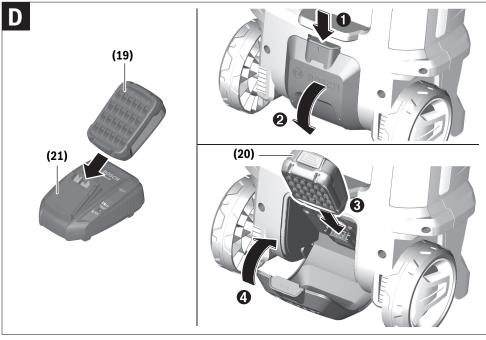


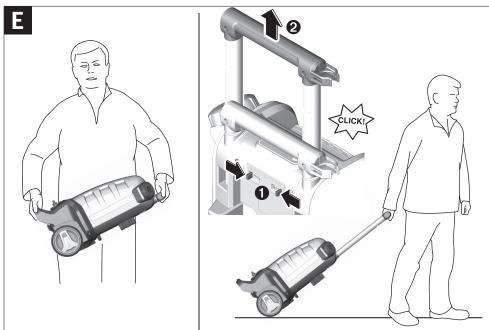



F016L81775 | (22.02.2018) Bosch Power Tools



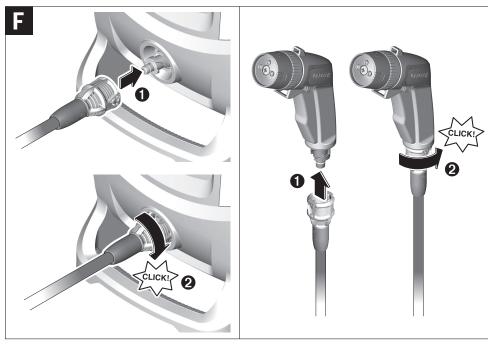


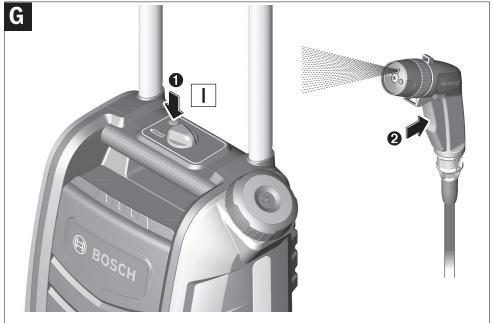

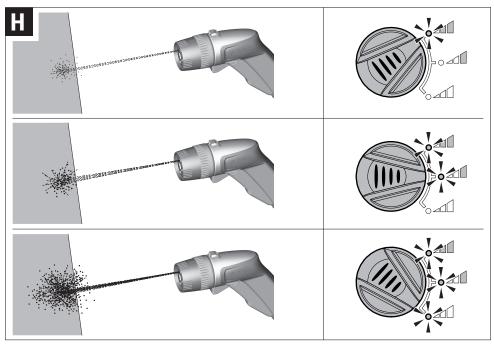


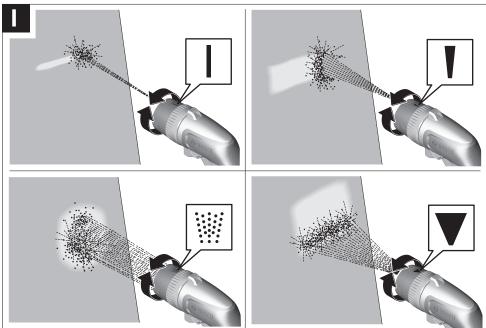


F 016 L81 775 | (22.02.2018) Bosch Power Tools

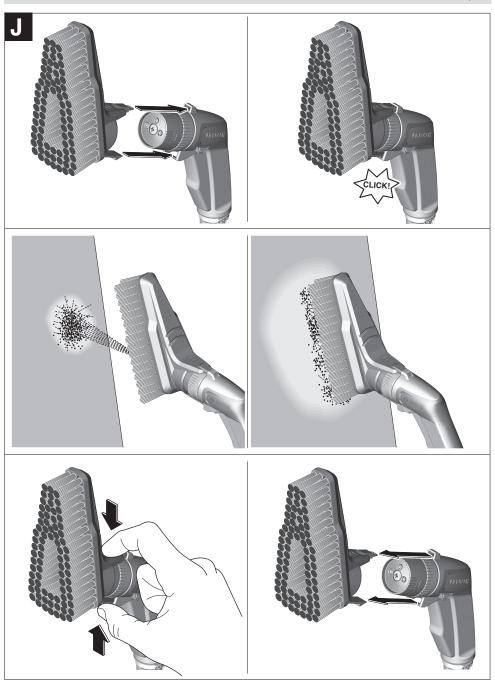




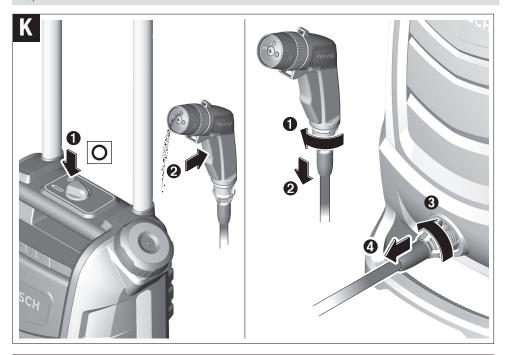

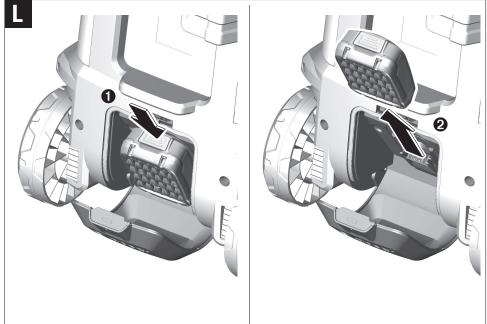

F016L81775 | (22.02.2018) Bosch Power Tools



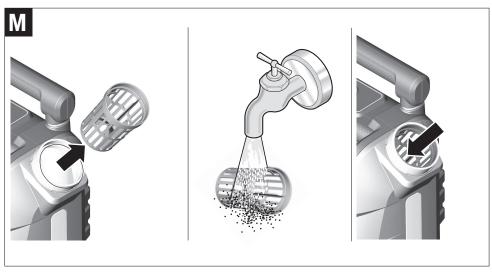





20|







www.bosch-pt.com






Ш			( €
II			CE
CS	EU prohlášení oshodě		Prohlašujeme na výhradní zodpovědnost, že uvedený výrobek
	Akumulátorový tlakový čistič	Objednací číslo	splňuje všechna příslušná ustanovení níže uvedených směrnic anařízení aje vsouladu snásledujícími normami:*
sk	EÚ vyhlásenie ozhode		Vyhlasujeme na výhradnú zodpovednosť, že uvedený výrobok
	Akumulátorovýtlakový čistič	Vecné číslo	spĺňa všetky príslušné ustanovenia nižšie uvedených smerníc anariadení aje vsúlade snasledujúcimi normami:
hu	EU konformitási nyilatko	ozat	Egyedüli felelőséggel kijelentjük, hogy a megnevezett termékek
	Akkumulátoros nagy- nyomású mosó	Cikkszám	megfelelnek az alábbiakban felsorolásra kerülő irányelvek és ren- deletek valamennyi idevágó előírásainak és megfelelnek a követ- kező szabványoknak.
ru	Заявление о соответств	вии ЕС	Мы заявляем под нашу единоличную ответственность, что
	Аккумуляторный очиститель высокого давления	Товарный №	названные продукты соответствуют всем действующим предписаниям нижеуказанных директив и распоряжений, а также нижеуказанных норм.
uk	Заява про відповідніст	ь €C	Мизаявляємо під нашу одноособову відповідальність, що
	Акумуляторний очищувач високого тиску	Товарний номер	названі вироби відповідають усім чинним положенням нищеозначених директив і розпоряджень, а також нижчеозначеним нормам.
kk	ЕО сәйкестік мағлұмда	масы	Өз жауапкершілікпен біз аталған өнімдер төменде жзылған
	Қысыммен жұмыс істейтін тазалау құралының	Өнім нөмірі	директикалар мен жарлықтардың тиісті қағидаларына сәйкестігін және төмендегі нормаларға сай екенін білдіреміз.
	аккумуляторы		
ro	Declarație de conformitate UE		Declarăm pe proprie răspundere că produsele menţionate cor spund tuturor dispoziţiilor relevante ale directivelor şi regle-
	Maşină de curățat cu presiune cu acumulator	Număr de identificare	mentărilor enumerate în cele ce urmează și sunt în conformitate cu următoarele standarde.
bg	ЕС декларация за съответствие		С пълна отговорност ние декларираме, че посочените
	Акумулаторна водоструйна машина	Каталожен номер	продукти отговарят на всички валидни изисквания на директивите и разпоредбите по-долу и съответства на следните стандарти.
mk	ЕU-Изјава за сообразност		Со целосна одговорност изјавуваме, дека опишаните
	Батериска високопритисна пералка	Број на дел/артикл	производи се во согласност со сите релевантни одредби на следните регулативи и прописи и се во согласност со следните норми.
sr	EU-izjava o usaglašenost	ti	Na sopstvenu odgovornost izjavljujemo, da navedeni proizvodi
	Čistač pod pritiskom akumulatora	Broj predmeta	odgovaraju svim dotičnim odredbama naknadno navedenih smernica u uredaba i da su u skladu sa sledećim standardima.
sl	Izjava o skladnosti EU		Izjavljamo pod izključno odgovornostjo, da je omenjen izdelek v
	Akumulatorski tlačni či- stilnik	Številka artikla	skladu z vsemi relevantnimi določili direktiv in uredb ter ustreza naslednjim standardom.
hr	EU izjava o sukladnosti		Pod punom odgovornošću izjavljujemo da navedeni proizvodi
	Akumulatorski tlačni či- stač	Kataloški br.	odgovaraju svim relevantnim odredbama direktiva i propisima navedenima u nastavku i da su sukladni sa sljedećim normama.
et	EL-vastavusdeklaratsioo	on	Kinnitame ainuvastutajatena, et nimetatud tooted vastavad jär-
	Akutoitega survepesur	Tootenumber	gnevalt loetletud direktiivide ja määruste kõikidele asjaomastele nõuetele ja on kooskõlas järgmiste normidega.
Labella distributi appel unit parife di dischazioni un		Mēs ar pilnu atbildību paziņojam, ka šeit aplūkotie izstrādājumi	
	Akumulatora spiediena tīrītājs	Izstrādājuma numurs	atbilst visiem tālāk minētajās direktīvās un rīkojumos ietvertajām saistošajām nostādnēm, kā arī sekojošiem standartiem.

F016L81775 | (22.02.2018) Bosch Power Tools



(	C€				
lt	ES atitikties deklaracija  Akumuliatorinis slėginis Gaminio numeris valymo įrenginys		Atsakingai pareiškiame, kad išvardyti gaminiai atitinka visus privalomus žemiau nurodytų direktyvų ir reglamentų reikalavimus ir šiuos standartus.		
	Fontus	3 600 8B6	2014/35/EU 2014/30/EU 2011/65/EU 2000/14/EC EN 60335-1:2012+A11:2014 EN 60335-2-54:2008+A11:2012+A1:2015 EN 55014-1:2006+A1:2009+A2:2011 EN 55014-2:1997+A1:2001+A2:2008 EN 50581:2012		

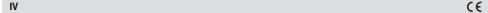


- de 2000/14/EG: Gemessener Schallleistungspegel 74 dB(A), Unsicherheit K = 3 dB, garantierter Schallleistungspegel 76 dB(A); Bewertungsverfahren der Konformität gemäß Anhang V. Produktkategorie: 27 Technische Unterlagen bei: \*
- en 2000/14/EC: Measured sound power level 74 dB(A), uncertainty K = 3 dB, guaranteed sound power level 76 dB(A); Conformity assessment procedure in accordance with annex V. Product category: 27 Technical file at: \*
- fr 2000/14/CE: niveau de puissance acoustique mesuré 74 dB(A), incertitude K=3 dB, niveau de puissance acoustique garanti 76 dB(A); procédure d'évaluation de conformité selon l'annexe V. Catégorie de produit: 27 Dossier technique auprès de: \*
- es 2000/14/CE: nivel medido de la potencia acústica **74** dB(A), tolerancia K = **3** dB, nivel garantizado de la potencia acústica **76** dB(A); método de evaluación de la conformidad según anexo **V**. Categoría de producto: **27** Documentos técnicos de: \*
- pt 2000/14/CE: Nível de potência acústica medido 74 dB(A), insegurança K = 3 dB, nível de potência acústica garantido 76 dB(A); processo de avaliação da conformidade de acordo com o anexo V. Categoria de produto: 27 Documentação técnica pertencente à: \*
- it 2000/14/CE: livello di potenza sonora misurato 74 dB(A), incertezza K = 3 dB, livello di potenza sonora garantito 76 dB(A); procedimento di valutazione della conformità secondo l'Allegato V. Categoria prodotto: 27 Documentazione Tecnica presso: \*
- nl 2000/14/EG: gemeten geluidsvermogensniveau 74 dB(A), onzekerheid K = 3 dB, gegarandeerd geluidsvermogensniveau 76 dB(A); beoordelingsmethode van de overeenstemming volgens bijlage V. Productcategorie: 27 Technisch dossier bij: \*
- da 2000/14/EF: Målt lydeffektniveau 74 dB(A), usikkerhed K=3 dB, garanteret lydeffektniveau 76 dB(A); overensstemmelsesvurderingsprocedure som omhandlet i bilag V. Produktkategori: 27 Tekniske bilag ved: \*
- sv 2000/14/EG: Uppmätt bullernivå 74 dB(A), osäkerhet K = 3 dB, garanterad bullernivå 76 dB(A); konformitetens bedömningsmetod enligt bilaga V. Produktkategori: 27 Teknisk dokumentation: \*
- no 2000/14/EC: Målt lydeffektnivå 74 dB(A), usikkerhet K=3 dB, garantert lydeffektnivå 76 dB(A); samsvarsvurderingsmetode i henhold til vedlegg V. Produktkategori: 27 Teknisk dokumentasjon hos: \*
- fi 2000/14/EY: mitattu äänitehotaso 74 dB(A), epävarmuus K = 3 dB, taattu äänitehotaso 76 dB(A); vaatimustenmukaisuuden arviointimenetelmä liitteen V mukaisesti. Tuotekategoria: 27 Tekniset asiakirjat saatavana: \*
- el 2000/14/ΕΚ: Μετρημένη στάθμη ηχητικής ισχύος **74** dB(A), ανασφάλεια Κ = **3** dB, εγγυημένη στάθμη ηχητικής ισχύος **76** dB(A). Διαδικασία αξιολόγησης της πιστότητας σύμφωνα με το παράρτημα **V**. Κατηγορία προϊόντος: **27** Τεχνικά έγγραφα στη: \*
- tr 2000/14/EC: Ölçülen ses gücü seviyesi 74 dB(A), tolerans K=3 dB, garanti edilen ses gücü seviyesi 76 dB(A); uygunluk değerlendirme yöntemi ek V uyarınca. Ürün kategorisi: 27 Teknik belgelerin bulunduğu yer: \*
- pl 2000/14/WE: pomierzony poziom mocy akustycznej 74 dB(A), niepewność K=3 dB, gwarantowany poziom mocy akustycznej 76 dB(A); procedura oceny zgodności zgodnie z załącznikiem V. Kategoria produktów: 27 Dokumentacja techniczna: \*
- cs 2000/14/ES: změřená hladina akustického výkonu 74 dB(A), nejistota K = 3 dB, zaručená hladina akustického výkonu 76 dB(A); metoda posouzení shody podle dodatku V. Kategorie výrobku: 27 Technické podklady u: \*
- sk 2000/14/ES: odmeraná hladina akustického výkonu 74 dB(A), neistota K = 3 dB, zaručená hladina akustického výkonu 76 dB(A); metóda posúdenia zhody podľa dodatku V. Kategória výrobku: 27 Technické podklady má spoločnosť: \*
- hu 2000/14/EK: Mért hangteljesítmény-szint 74 dB(A), szórás K = 3 dB, garantált hangteljesítmény-szint 76 dB(A); a konformitás kiértékelési eljárást lásd a V Függelékben. Termékkategória: 27 Műszaki dokumentumok megőrzési pontja: \*
- ru 2000/14/ЕС: Измеренный уровень звуковой мощности 74 дБ(А), погрешность К = 3 дБ, гарантированный уровень звуковой мощности 76 дБ(А); процедура оценки соответствия согласно приложения V. Категория

F 016 L81 775 | (22.02.2018)

Bosch Power Tools



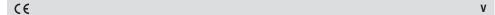

продукта: 27

Техническая документация хранится у: \*

2000/14/ЕС: виміряна звукова потужність 74 дБ(A), похибка К=3 дБ, гарантована звукова потужність 76 дБ(A); процедура оцінки відповідності відповідно до додатку V. Категорія продукту: 27 Технічна документація зберігається у: \*

- 2000/14/ЕС: Өлшелген дыбыс қаттылығы 74 дБ(А), дәлсіздік К=3 дБ, кепілденген дыбыс қаттылығы 76 дБ(А); Сәйкестікті анықтау әдісі V тіркелгісі бойынша. Өнім санаты: 27 Техникалық құжаттар: \*
- 2000/14/CE: Nivel măsurat al puterii sonore 74 dB(A), incertitudine K = 3 dB, nivel garantat al puterii sonore 76 dB(A); procedură de evaluare a conformității potrivit Anexei V. Categorie produse: 27 Documentație tehnică la: \*
- 2000/14/EO: измерено ниво на звуковата мощност 74 dB(A), неопределеност K = 3 dB, гарантирано ниво на мощността на звука 76 dB(A); метод за оценка на съответствието съгласно приложение V. Категория продукт: 27 Техническа документация при: \*
- 2000/14/EC: Измерено ниво на звучна јачина **74** dB(A), несигурност K=**3** dB, загарантирано ниво на звучна јачина 76 dB(A); постапка за процена на сообразноста според прилог V. Категорија на производ: 27 Техничка документација кај: \*
- 2000/14/EC: izmereni nivo ostvarene buke 74 dB(A), nepouzdanost K=3 dB, garantovani nivo ostvarene buke 76 dB(A); postupak ocenjivanja usaglašenosti prema prilogu V. Kategorija proizvoda: 27 Tehnička dokumentacija kod: \*
- 2000/14/ES: Izmerjena raven zvočne moči **74** dB(A), negotovost K = **3** dB, zagotovljena raven zvočne moči **76** dB(A); postopek za presojo skladnosti v skladu s prilogo V. Kategorija izdelka: 27 Tehnična dokumentacija pri: \*
- 2000/14/EZ: Izmjerena razina učinka buke **74** dB(A), nesigurnost K = **3** dB, zajamčena razina učinka buke **76** dB(A); postupak ocjenjivanja sukladnosti prema dodatku V. Kategorija proizvoda: 27 Tehnička dokumentacija se može dobiti kod: \*
- 2000/14/EÜ: Mõõdetud helivõimsustase 74 dB(A), mõõtemääramatus K = 3 dB, garanteeritud helivõimsustase 76 dB(A); vastavuse hindamise meetod vastavalt lisale V. Tootekategooria: 27 Tehnilised dokumendid saadaval: \*
- 2000/14/EK: izmērītais trokšņa jaudas līmenis ir 74 dB(A), izkliede K ir =3 dB, garantētais trokšņa jaudas līmenis ir 76 dB(A); atbilstības novērtēšana ir veikta saskanā ar pielikumu V. Izstrādājuma kategorija: 27 Tehniskā dokumentācija no: \*
- 2000/14/EB: išmatuotas garso galios lygis 74 dB(A), paklaida K=3 dB, garantuotas garso galios lygis 76 dB(A); atitikties vertinimas atliktas pagal priedą V. Gaminio kategorija: 27 Techninė dokumentacija saugoma: '



BOSCH

\* Bosch Lawn and Garden Ltd., PT-HG/ENS-STW, Stowmarket, Suffolk IP14 1EY, England

Executive Vice President Head of Product Certification

Helmut Heinzelmann

Engineering and Manufac-

turing

flut Bea i.V. Kille

Robert Bosch Power Tools GmbH, 70538 Stuttgart, GERMANY Stuttgart. 22.02.2018